

EQUIPMENT NEEDED

- One (1) can of SlipDoctors Non-Slip Spray for Fiberglass, Acrylic or Porcelain Bathtubs/Showers
- Painter's Tape
- Painter's Paper

Note: for porcelain bathtubs, please repair any chips prior to application. Repair kits can be purchased at your local home improvement store.



Available in Clear and White!

INSTRUCTIONS

SURFACE PREPARATION

Always test a small area for color compatibility and adhesion. **Fiberglass/Acrylic:** Lightly sand with 220 grit sand paper to promote adhesion.

Note: we do not recommend using black sandpaper, as it can leave behind small black dots that may be visible after using the clear spray.

Clean surface with soap and water or wipe with clean cloth and lacquer thinner (or another cleaner that does not leave a film or residue) to remove all sanding dust. Allow to dry thoroughly. For other surface preparation instructions, please visit the technical page on www.slipdoctors.com.

APPLICATION

Step 1 Surface should be dry, clean and free of oil, wax, dirt, loose paint and other contaminants.

Step 2 After entire surface is completely dry, properly ventilate room by opening windows, doors, turning on ceiling fans, etc.

Step 3 Tape off application area with painter's tape. (Figure A)

Step 4 Mix contents of can well by shaking until the ball rattles within the can. Once ball rattles, continue to shake vigorously for 2-3 minutes. During use, shake intermittently for 10 seconds to keep product mixed.

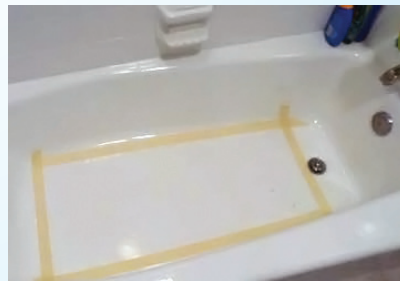


Figure A

Step 5 Use painter's paper to protect surrounding areas from overspray. (Figure B)
Step 6 Spray 6 - 12 inches away from surface in a sweeping motion during application. Applying 2-3 light coats will cure, protect and look better than one heavy coat.



Figure B

Step 6 If spray stops or is irregular, turn can upside down and spray for 2-3 seconds to clear nozzle. Wipe tip, shake can and resume.

Step 7 Slowly remove all tape and paper shortly after application. **Allow 24 hours** before use to allow product to fully cure. If product will be subject to prolonged periods of soaking in water, **allow 48 hours** before use to fully cure.



CLEAN UP & REMOVAL

- Remove overspray with paint thinner or lacquer thinner.
- **IMPORTANT:** Before storing partial can, clean valve immediately after use. To clean, hold can upside down and spray until only clear gas comes out (approximately 3 - 5 seconds), then wipe tip and store.
- If spray valve becomes clogged, pull off and clean in lacquer thinner. Replace spray valve pointing opening away from body.
- **If desired to remove product, use acetone.** For more details, refer to the Non-Slip Spray Clear & White Technical Data Sheet.

QUESTIONS OR COMMENTS? WE WANT TO HEAR FROM YOU!

IF YOU LIKE THIS PRODUCT, SEND US YOUR FEEDBACK
BY EMAILING SUPPORT@SLIPDOCTORS.COM
OR BY POSTING A REVIEW ONLINE